

Ref:

It have two functions. To know which one is save, another is version it is load.

Controller limit current.

Controller low voltage value

24V set 16-24; 36V set 25-34
48V set 35-45; 60V set 48-55
24-48 wide voltage 18-43; 24-60V wide voltage 18-55。

COM Port, it should be COM4 or COM5, this port will automatically change when plug in the USB cable

Assit0~9 speed percent value

Assit0~9 current percent value

File Help

Basic Pedal Assist Throttle Handle

Low Battery Protect(V) :

Limited Current(A) :

	Limit Current(%)	Limit Spd(%)
Assit 0:	0	0
Assit 1:	20	20
Assit 2:	30	30
Assit 3:	40	40
Assit 4:	50	50
Assit 5:	60	60
Assit 6:	70	70
Assit 7:	80	80
Assit 8:	90	90
Assit 9:	100	100

Wheel Diameter(Inch):

Speed Meter Model:

SpdMeter Signal:

Read Write

Wheel size

BaFang Motor
Controller Debug V1.0
, www.szba.com

Network

Port:

Bandrate:

Connect

Controller Info

Manufacturer:
Model:
Harware Ver:
Firmware Ver:
Nominal Voltage:
Max. Current:

Baud rate when connecting the computer

Click this button to start connecting.

Read Flash

Write Flash

Read the original parameter

Set the parameter

Speed test signal

Speed meter model :
External, Wheel Meter,
Internal, Motor Meter,
By Motor Phase

Read general parameter

Set general parameter



